




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT ACR 3250. You'll find the answers to all your questions on the BLAUPUNKT ACR 3250 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT ACR 3250
User guide BLAUPUNKT ACR 3250
Operating instructions BLAUPUNKT ACR 3250
Instructions for use BLAUPUNKT ACR 3250
Instruction manual BLAUPUNKT ACR 3250

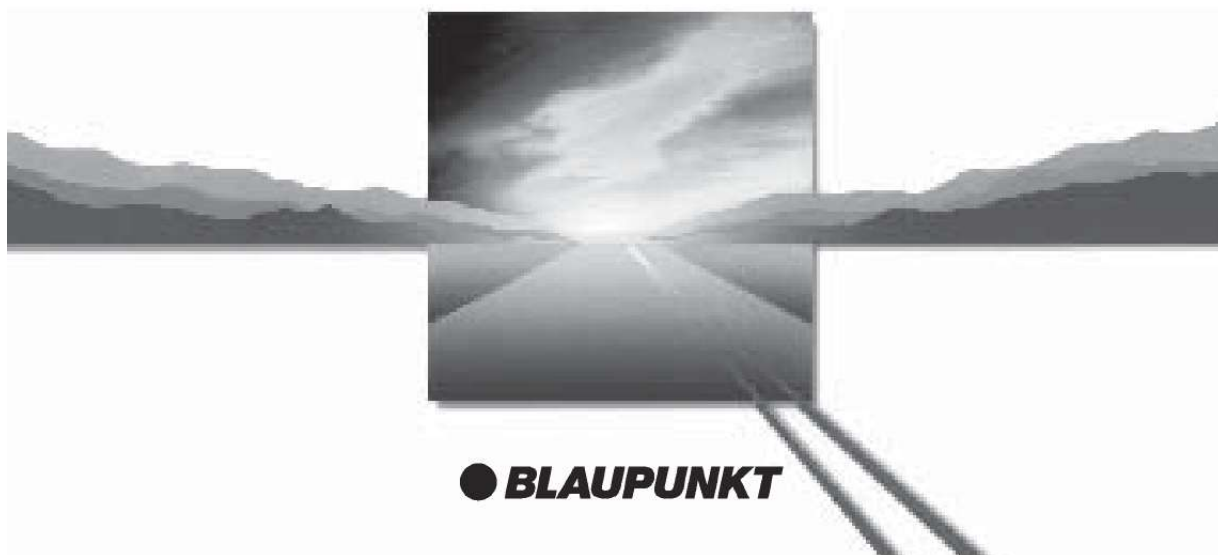

Operating instructions



ACR 3250



[Your user manual](#)
[BLAUPUNKT ACR 3250](#)

Manual abstract:

manual, if "m" lights up in the display. Toggle by pressing the lo-m button. = Code LED Flashes for additional theft protection when the ignition has been switched off. NDR1 FM I, II, T 4 lo AF TP TA Tape operation: TAPE-Tape operation 15 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO - Station abbreviation or frequency Waveband Memory bank (I, II, or Travelstore) Preset buttons (1 - 6) Stereo Seek tuning sensitivity Alternative RDS frequency You are listening to a traffic programme station. - Priority for traffic programme stations FRANÇAIS ENGLISH DEUTSCH Important notes Precautions Before starting to use your new car radio, please read the information on "Traffic safety" and "Anti-theft protection" carefully. Anti-theft protection Installation/Connection If you would like to install this equipment yourself or add any new components, please carefully read the installation and connection instructions following the appendix. Do not ground the loudspeaker outputs! Use only the accessory and replacement parts approved by Blaupunkt. This car radio is supplied with inactive code protection. In order to switch the security coding system on, proceed as described in the following. If the coding system is active while the power supply to the system is interrupted (e.g. theft, disconnection of the car battery), the set will be electronically blocked. In such a case it can only be made operable again by entering the correct code number given in the car radio passport. Traffic safety As the driver of a motor vehicle, it is your responsibility to pay attention to the traffic situation at all times. Never use your car radio in a way that could distract you. Please keep in mind that you travel a distance of 14 m per second at a speed of only 50 km/h. Should the traffic situation become particularly demanding, we advise you not to use the radio. Always make sure that you are still able to hear any warning signals coming from outside of the vehicle, such as police or fire engine sirens, so that you can react accordingly. Therefore, you should always select a moderate volume for playing your car radio while you are driving. Entry of a wrong code number It should not be possible for a thief to find out the correct code number by trial and error. This is why the set will be blocked for a certain period of time after a wrong code number has been entered. The display will then show "CODE ERR". After the first three unsuccessful attempts the system will lock for 10 seconds; after further attempts, the waiting time extends to one hour. After 19 unsuccessful attempts the display will show "OFF". In this case you can no longer re-start the unit. Note: Keep your car radio passport with the code number in a safe place in order to avoid 16 "unauthorised access" to your car radio. When the security code system is activated, the unique code must be entered each time the power to the unit was interrupted. The radio will function again as soon as you have entered the correct code. If you have lost your radio passport and forgotten the code number, your radio can only be made operable again by one of our authorised service workshops, which is subject to payment. . . . Press AF and J buttons simultaneously and hold down while switching the set on again. The display shows "CODE". Switching on security coding To activate the coding system: · Turn off the radio. . . . Press buttons AF and J simultaneously and hold down. Turn on the radio. The display shows "CODE". Briefly press the FM button; the display shows "0000". Enter the code number given in the Blaupunkt car radio passport. Example: The code number is 2521. - Press the FM button twice; the display shows "2000". - Press the AF button five times; the display shows "2500". - Press the TA button twice; the display shows "2520". Now the security coding system is active. The display will briefly show "C" each time the set is turned on. If the display shows "CODE ERR", you have entered a wrong code. Re-enter the correct code after the waiting time ("CODE" will appear in the display). If you switch off the set while it is blocked, the waiting time will start anew as soon as the radio is turned on again..



[Your user manual](#)
[BLAUPUNKT ACR 3250](#)